

useless. That is why the areas above the installation must be protected.

Careful thought and planning are required to make the installation successful. Sometimes on-site improvisation is required. We can furnish the

material, but it must be installed with skill and ingenuity.

Naturally, since there are so many different factors to be considered, we make no warranties, guarantees or representations expressed or implied.

## SURFACE DEPTH SPECIFICATION CHARTS

### Exposed On One Side

Building Ledge, Flush Mount Signs, Windows, Etc.

Surface Depth (inches)	Rows Required
1 — 2	1/2*
2 1/4 — 4	1**
4 1/4 — 6	1 1/2
6 1/4 — 9	2
9 1/4 — 11 1/2	2 1/2
11 3/4 — 14	3
14 1/4 — 16 1/2	3 1/2
16 3/4 — 19	4
19 1/4 — 21 1/2	4 1/2
21 3/4 — 24	5

### Exposed On Two Sides

Parapets, Gutters, Beams, Extended Signs, Etc.

Surface Depth (inches)	Rows Required
0 — 3 3/4	1
3 5/8 — 4 1/2	1 1/2
4 5/8 — 7 1/2	2
7 5/8 — 9 1/2	2 1/2
9 5/8 — 12 1/2	3
12 5/8 — 14 1/2	3 1/2
14 5/8 — 17 1/2	4
17 5/8 — 19 1/2	4 1/2
19 5/8 — 22 1/2	5
22 5/8 — 24 1/2	5 1/2
24 5/8 — 27 1/2	6











\*1/2 Row refers to H55 Half Row Nixalite.

\*\*1 Row or any whole number refers to Models NX77 or L53 Full Row Nixalite.

## NIXALITE® "SPACE-I-FICATIONS"

- [A] Measure always from middle of base strip
- [B] Maximum distance between rows 5". Minimum distance between rows 3 1/2"
- [C] Extend Nixalite strip at least 1/2" over end of surface

- [D] Maximum distance to outside edge 1 1/4"
- [E] Nixalite needles must extend over edge at least 1/4"
- [F] Maximum distance to inside wall 2 3/4"

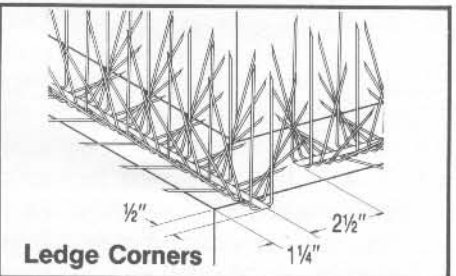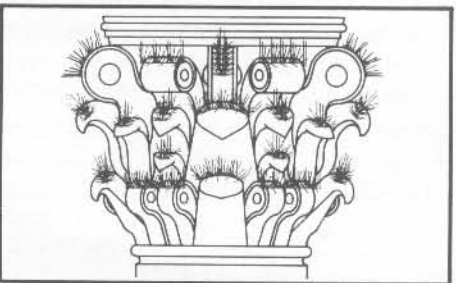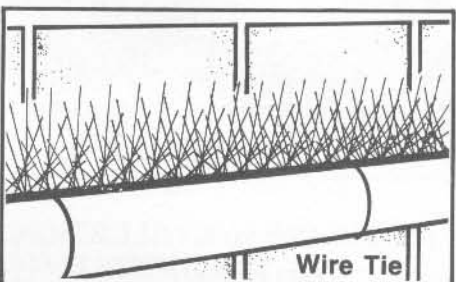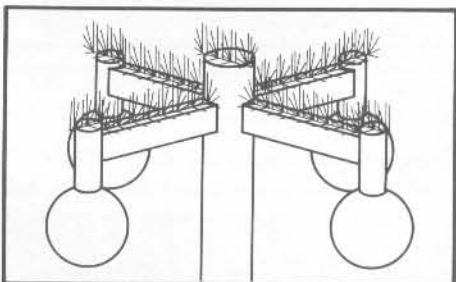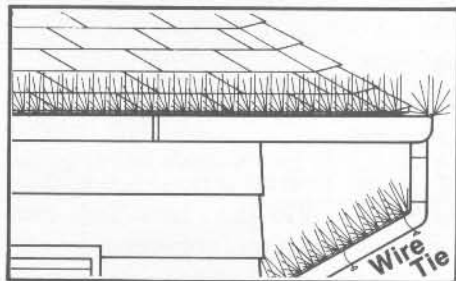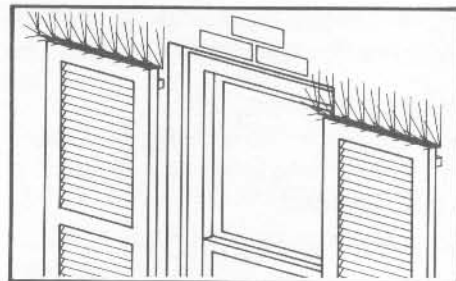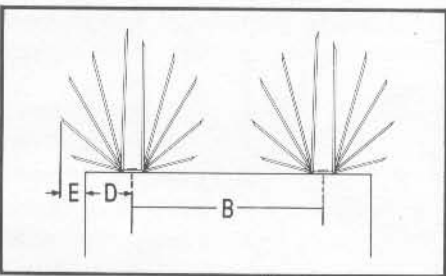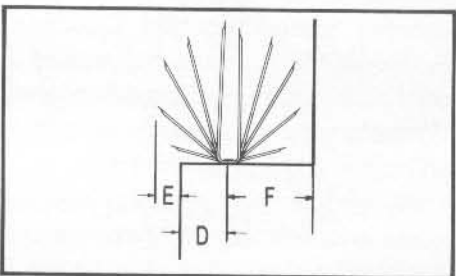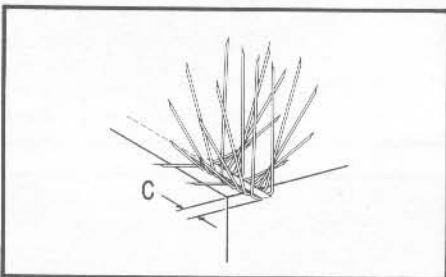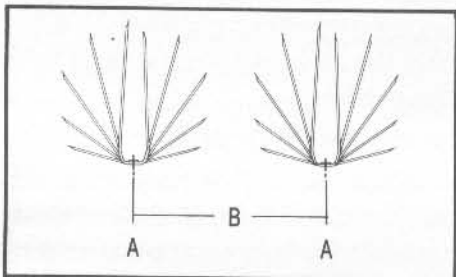

NIXALITE® of AMERICA

1025 - 16th AVE. • BOX 727  
EAST MOLINE, IL 61244 • 309-755-8771  
800-624-1189 • FAX 309-755-0077

SPECIALISTS IN BIRD CONTROL